



**Important:** Only use the mains power adaptors, cables and rechargeable batteries supplied in this box, or this product may not work. Any replacement rechargeable batteries must be the same type. BT accepts no responsibility for damage caused to your phone by using any other type of batteries.

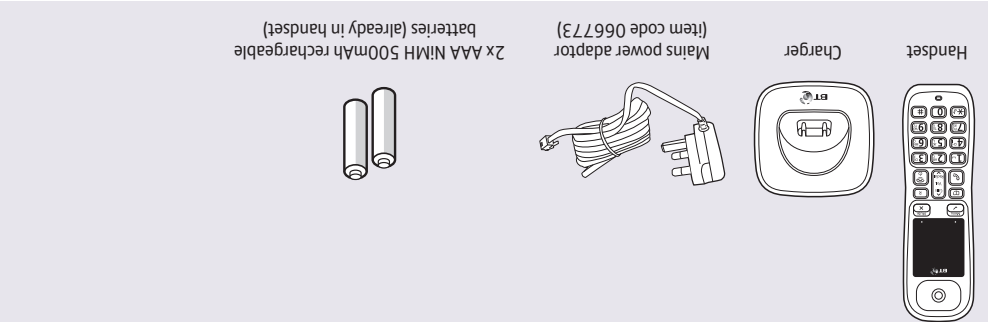

For each additional handset (if you've bought a multipack)

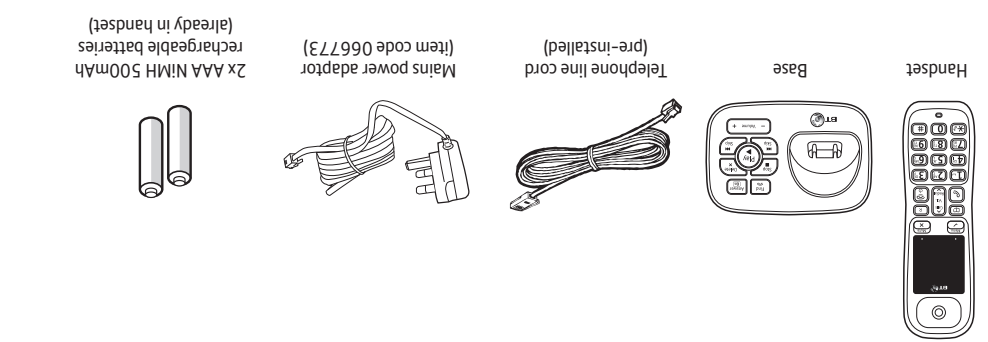


What's in the box



BT1700  
Digital Cordless Phone with Answer Machine

Please  
turn  
over

- 1 The telephone line cord is already fitted, plug the other end into the wall socket.
- 2 Plug the mains power adaptor into the base, with the cable clipped in the groove provided.
- 3 Plug the other end of the power adaptor into the wall power socket and switch on.

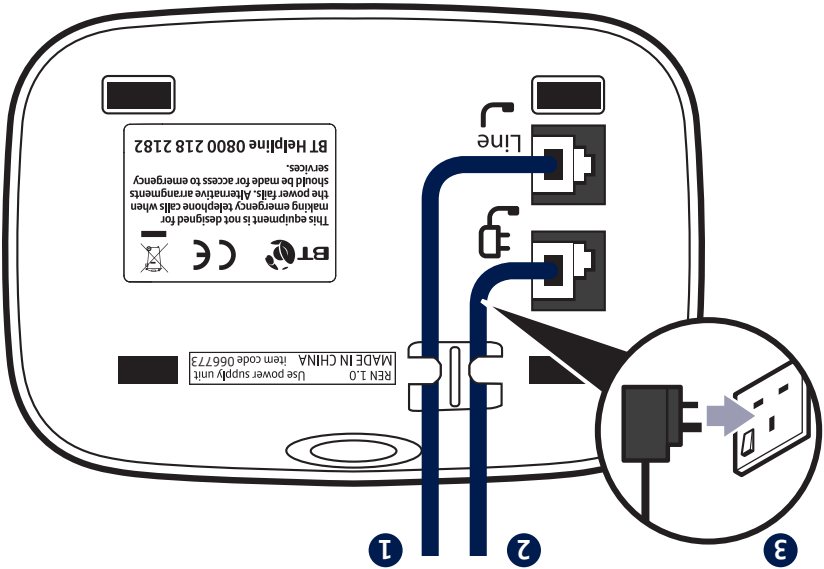


1 Plug in

- ⓘ** If you need to remove the batteries, slide open the battery compartment cover and using the finger hole, grip the batteries and gently pull them out.

- Set up your additional handsets (if you've bought a multipack)**
- 1 For each additional handset and charger: plug the mains power adaptor into the socket on the underside of the charger, secure the cable behind the retaining clip and plug the other end into the wall power socket and switch on.
  - 2 Activate the batteries as shown above. Then place the handset on the charger to charge for 16 hours.


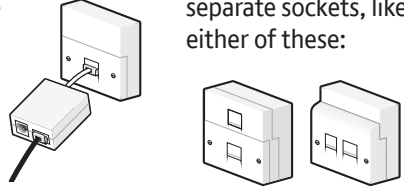
 
**ⓘ Important:** you should charge the batteries for 16 hours before using the handset for the first time.

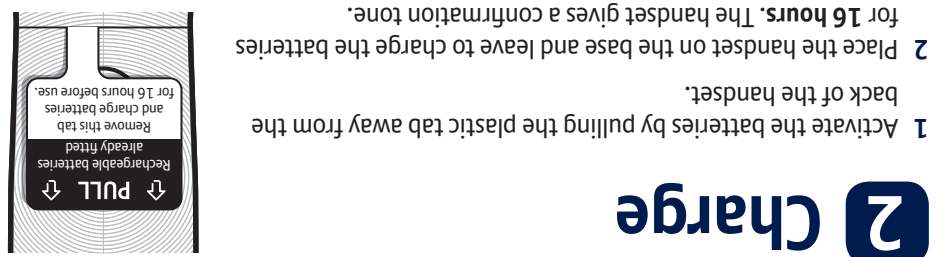

2 Charge

Troubleshooting

Most problems can be fixed with a few simple checks.

Problem	Solution
No dial tone or line cord error message displayed on-screen	Only use the cables and batteries supplied. Make sure both the mains power adaptor cable and telephone line cord are plugged into the correct sockets.
Poor speech quality	Make sure the product is not located too close to other electrical appliances. This can also help to improve the handset range from the base.
 Battery icon is animated in a cycle when charging	The battery charge is very low. Make sure you charge the batteries for 16 hours before use to ensure maximum battery performance
Using broadband on the same phone line?	<div>To avoid problems with your broadband or noise on your phone line, you might need to plug your telephone line cord into the wall via a microfilter (not supplied).</div> <div>If your main phone socket has a single socket, as shown, you'll need to use microfilters</div> <div></div> <div>You don't need to use microfilters if your main phone socket has two separate sockets, like either of these:</div> <div></div>

General information

For information on safety instructions, cleaning, technical information or connecting to a switchboard, please refer to the 'General information' section in the full user guide at [bt.com/producthelp](http://bt.com/producthelp)

**Guarantee**  
Your BT1700 is guaranteed for a period of 12 months from the date of purchase.

Subject to the terms listed below, the guarantee will provide for the repair of, or at BT's or its agent's discretion the option to replace the BT1700, or any component thereof, (other than batteries), which is identified as faulty or below standard, or as a result of inferior workmanship or materials. Products over 28 days old from the date of purchase may be replaced with a refurbished or repaired product.

The conditions of this guarantee are:

- The guarantee shall only apply to defects that occur within the 12 month guarantee period.
- Proof of purchase is required.
- The equipment is returned to BT or its agent as instructed.

This guarantee does not cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, tampering with the equipment, or any attempt at adjustment or repair other than through approved agents.

This guarantee does not affect your statutory rights.

To find out what to do, if your phone is in or outside of the 12 month guarantee, please look in the full user guide at [bt.com/producthelp](http://bt.com/producthelp)



**How to recycle your equipment**  
The symbol shown here and on the product means that the product is classed as electrical or electronic equipment, so DO NOT put it in your normal rubbish bin.

It's all part of the Waste Electrical and Electronic Equipment (WEEE) Directive to recycle products in the best way – to be kinder to the planet, get rid of dangerous things more safely and bury less rubbish in the ground.

You should contact your retailer or supplier for advice on how to dispose of this product in an environmentally friendly way.

**Warning**  
You won't be able to call 999 from this phone if there's a power cut, so make sure you've got another way to call for help in an emergency.

**R&TTE Directive & Declaration of Conformity**  
This product is intended for use within the UK for connection to the public telephone network and compatible switchboards.

This equipment complies with the essential requirements for the Radio Equipment and Telecommunications Terminal Equipment Directive (1999/5/EC).

For a copy of the Declaration of Conformity please refer to [bt.com/producthelp](http://bt.com/producthelp)

# 3 Using your phone

## ! You'll need Caller Display

To get the most from your nuisance call blocker phone and for all the features to work, you'll need to subscribe to a Caller Display service from your network provider. Charges may apply.

## Making and receiving calls

### Make and end a call

Press green , enter phone number using keypad. Press red  to end the call.

### Answer a call





Lift handset from base or charger. If the handset is not on the base or charger, you'll need to press green .

### Mute












 
 
Press  during a call. Press  to return to your caller.

## View or dial a number in Calls list†

The Calls list stores details of the last 20 incoming calls.

- 1 Press  to open the calls list and scroll to an entry.
  - 2 Press green  to dial the number.
- Or to view call details, press . **DETAILS** is displayed. Press .







## Block incoming call number in your Calls list†






- 1 Press , scroll to the entry and press . **DETAILS** is displayed.
- 2 Scroll to **ADD TO BLIST** (blacklist) and press .
- 3 Enter name using keypad, press . The number is displayed, press  to save.
- 4 Press red . Press , scroll to **CALL BLOCKER**, press .
- 5 Scroll to **SETTINGS**, press .
- 6 Scroll to **BLOCK MODE** and press . Select **BLOCK BLIST**, press . Scroll to **ALWAYS ON**, press . The  icon is displayed.

To view, delete or add numbers manually to the blacklist go to **CALL BLOCKER** menu. Note, the same phone number can't be saved in the blacklist and phonebook.

## Phonebook





### Store entry in phonebook (up to 50)

- 1 In idle mode, press . **EMPTY** is displayed if there are no numbers.
- 2 Press  to select **ADD**. Enter name using keypad and press .
- 3 Enter phone number and press  to save.
- 4 Press  to select ring melody, then  to save.

To save a number to your phonebook from the Calls list, press . Scroll to the entry you want to save and press . Scroll to **ADD TO PB** (phonebook) and press . Enter name using keypad and press . The number is displayed, press  to save. Then follow step 4 above.

If you have more than one handset registered to the base, your contacts are automatically updated to all handsets (up to 6 handsets).


### Dial entry in phonebook

- 1 In idle mode, press .
- 2 Scroll  or  to display the entry and press green  to dial.

## Handset buttons and display icons





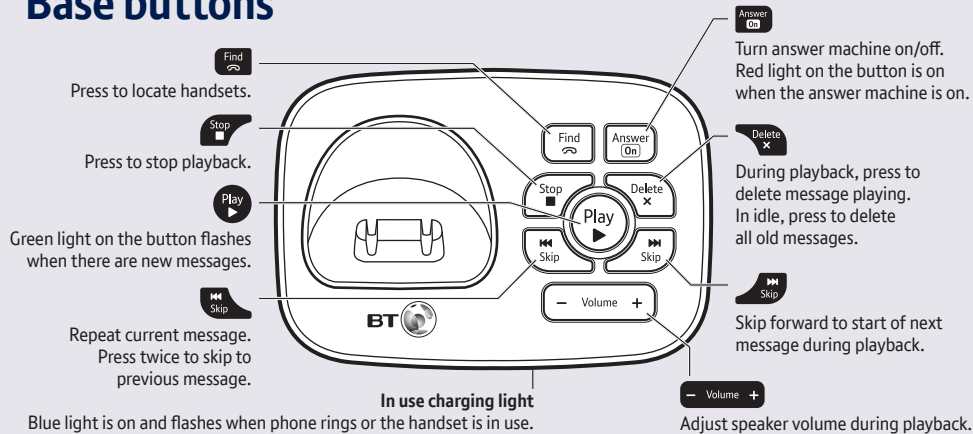




## Base buttons



## Answer machine






Your answer machine is on and ready to record messages. You can control it using the buttons on the base (see above) or using the handset **ANS. MACHINE** menu.

### Record your own outgoing message










- 1 Press . **ANS. MACHINE** is displayed, press .
- 2 Scroll to **TAM SETTINGS**, press . Then scroll to **OGM SETTINGS**, press .
- 3 Scroll to **ANS & REC** and press .
- 4 Scroll to **RECORD MESS** and press  to start recording. **RECORDING** is displayed. Press  to stop and save your outgoing message.

### Set the answer delay

For compatibility with BT1571 or another voicemail service make sure the answer delay is set to answer before the service, e.g. for BT1571 do not set to more than 5 rings.



- 1 Press . **ANS. MACHINE** is displayed, press .
- 2 Scroll to **TAM SETTINGS**, press . Then scroll to **ANSWER DELAY**, press .
- 3 Scroll to select **2 RINGS**, **4 RINGS**, **6 RINGS** or **8 RINGS**. Press  to confirm.

## Using the menu











- Press  to open the main menu, scroll through menu items using  or . When the menu you want is displayed, press . Press  or  to scroll through the sub-menus and press  to select.
- Use  to select options displayed above the button, on the display.
- Use  to exit a menu or go back.
- If no buttons are pressed for 30 seconds the handset will return to the idle screen.

## Handset volume and sounds

### Incoming speech volume

During a call, press  or  to increase or decrease the volume of your caller's voice.





### Handset ringer volume

- 1 Press , scroll  to **HS SETTINGS**, press .
- 2 Scroll  to **RING SETUP**, press . **EXT. RING** is displayed.
- 3 Scroll  to **RING VOLUME**, press .
- 4 Press  or  to adjust the volume, press  to save.

 
 
### Turn ringer off

Press and hold  to turn ringer off and on.

### Handset ringtone (for external or internal calls)

- 1 Press , scroll  to **HS SETTINGS**, press .
- 2 Scroll  to **RING SETUP**, press . **EXT. RING** is displayed, press  or press  to display **INT. RING TONE** then press .
- 3 Press  or  to hear ringtones, press  to save.

## Using the keypad


- When entering letters you may need to press the same button a few times until the letter you want is displayed, e.g. press  once for **A**, twice for **B**, three times for **C**
- To enter a space, press 

## Need some help?

Frequently asked questions and a full user guide are available online.

 [bt.com/producthelp](http://bt.com/producthelp)

If you cannot find the answer to your question in the full online user guide, call our free Helpline. Our dedicated advisors are more likely to be able to help you than the retailer where you bought your phone.

 **0800 218 2182\***

This user guide is also available in other formats: large print, Braille and audio CD. Call the helpline for a copy.

\* Calls made from within the UK mainland network are free. Mobile and international call costs may vary.  
† Requires a subscription to a Caller Display service from your network provider. Charges may apply.