

# DeskDECT Feature Phone



Please read this manual carefully before using your DeskDECT.

<b>1.</b>	<b>INTRODUCTION</b>	<b>3</b>
<b>2.</b>	<b>GETTING STARTED</b>	<b>4</b>
2.1	What's Inside	4
2.2	General	4
<b>3.</b>	<b>INSTALLATION</b>	<b>5</b>
3.1	Battery	5
3.2	Getting to know the Handset	6
3.3	Using the Menu	7
3.4	Handset Display Language	7
3.5	Register this Unit to a DECT GAP Base Station	8
<b>4.</b>	<b>Using the DeskDECT</b>	<b>9</b>
4.1	Switching the Unit On/Off	9
4.2	Making an External Call	9
4.2.1	Pre-Dialing	9
4.2.2	Direct Call	9
4.3	Making an Internal Call	9
4.4	Answering an Incoming Phone Call	10
4.4.1	Answering a Call	10
4.4.2	Transferring a Call to Another Handset	10
4.5	Changing the Speaker Volume	10
4.6	Deactivating the Microphone ( Mute )	11
4.7	Last Number Redial	11
4.8	Calling from the Caller List	11
4.9	Speed Dial	12
4.10	Call Duration Display	12
4.11	Out of Range	12

<b>5.</b>	<b>Call Transfer, On Hold, Toggle and Three Party Conference</b>	<b>13</b>
<b>5.1</b>	<b>Placing a Call on Hold</b>	<b>13</b>
<b>5.2</b>	<b>Transferring an External Call to Another Handset</b>	<b>13</b>
<b>5.3</b>	<b>Brokers Call (Toggling Between an Internal Call and an External call)</b>	<b>13</b>
<b>5.4</b>	<b>Three Party Conference Call</b>	<b>14</b>
<b>6.</b>	<b>Phone Book</b>	<b>15</b>
<b>6.1</b>	<b>Use of the Alphanumerical Keypad</b>	<b>15</b>
<b>6.2</b>	<b>Adding an Entry to the Phonebook</b>	<b>16</b>
<b>6.3</b>	<b>Changing a Name and Number from the Phonebook</b>	<b>16</b>
<b>6.4</b>	<b>Reading the Phonebook List</b>	<b>17</b>
<b>6.5</b>	<b>Quick Search in the Phonebook List</b>	<b>17</b>
<b>6.6</b>	<b>Erasing One Number and Name from the Phonebook</b>	<b>18</b>
<b>6.7</b>	<b>Erasing All Numbers and Name from the Phonebook</b>	<b>18</b>
<b>7.</b>	<b>HANDSET SETTINGS</b>	<b>19</b>
<b>7.1</b>	<b>Key Lock</b>	<b>19</b>
<b>7.2</b>	<b>Ring Melody and Volume for External Calls</b>	<b>19</b>
<b>7.3</b>	<b>Ring Melody and Volume for Internal Calls</b>	<b>19</b>
<b>7.4</b>	<b>Enable/Disable the Hot Key Function</b>	<b>20</b>
<b>7.5</b>	<b>Enable/Disable Key Tone</b>	<b>21</b>
<b>7.6</b>	<b>Handset Name</b>	<b>21</b>
<b>7.7</b>	<b>Set PIN Code</b>	<b>21</b>
<b>7.8</b>	<b>Answer a Call Using any key</b>	<b>22</b>
<b>7.9</b>	<b>Erase Caller List</b>	<b>22</b>
<b>7.10</b>	<b>Handset Reset</b>	<b>23</b>
<b>8.</b>	<b>TECHNICAL SPECIFICATION</b>	<b>24</b>

## 1. INTRODUCTION

Thank you for purchasing your DeskDECT feature phone. The DeskDECT retains all the features of the cordless DECT phones, but works on the desktop.

Please read the instructions carefully before use and keep this User Guide for future reference.

### For your Records

Date of Purchase:
Place of Purchase:
Serial Number (on the bottom of the unit):
Purchase Price:

For warranty purposes, proof of purchase is required, so please keep your receipt.

### Enter your PIN Numbers here:

Master / Base:

--	--	--	--

Sub / Handset:

--	--	--	--

More information on PIN Codes can be found in section 7.7.

Please note the DeskDECT comes with a Default Pincode: **1590**.

**Helpline Telephone Number: 0870 444 3246**

## **2. GETTING STARTED**

### **2.1. What's Inside**

If anything is missing, please contact your place of purchase immediately.

DeskDECT Handset x 1

Battery x 1

Adaptor x 1

User Guide x 1

### **2.2. General**

The DeskDECT is a GAP compatible, desktop DECT phone handset. The advantage of the DeskDECT is that it works with GAP compatible DECT Base stations.

The DeskDECT can be subscribed to a maximum of 4 different GAP compatible Base stations.

However, only one Base station can be linked to the DeskDECT at any one given time.

#### **Important note**

We cannot guarantee that all the functions of the DECT Base station can be used if you subscribe the DeskDECT to another Base station. To get the best performance from this DeskDECT, we recommend to use the DECTsys range of Base stations.

## 3. INSTALLATION

### 3.1. Battery

Before you use the unit for the first time, you must make sure that the batteries are charged for at least 10 hours. If you do not do this, the telephone will not function properly.

#### ***Installation of the battery***

- Plug the battery into the compartment at the rear of the unit.

**Important Note: Only use the power supply unit provided to charge the battery.**

#### ***Battery indicator:***





☐ This display indicates that the battery is low and is in 25% capacity.


☐ This display indicates that the battery is almost empty.


When the battery is low, you will hear warning signals and the battery symbol on the display will blink.


## 3.2. Getting to Know the Handset


- 
**INT/OK**

 
Power On/Off, establish internal connection or confirm function settings
- 


Caller ID - List caller ID and any missed calls.
- 


Phone book - List the telephone numbers stored in the phone book.
- 

**Mute/C/Escape** - Mute key (Microphone OFF in conversation),  
Correct mistakes (Clear) or escape from the Programming menu  
To return to Standby mode at any time, press and hold for 2 seconds.
- 

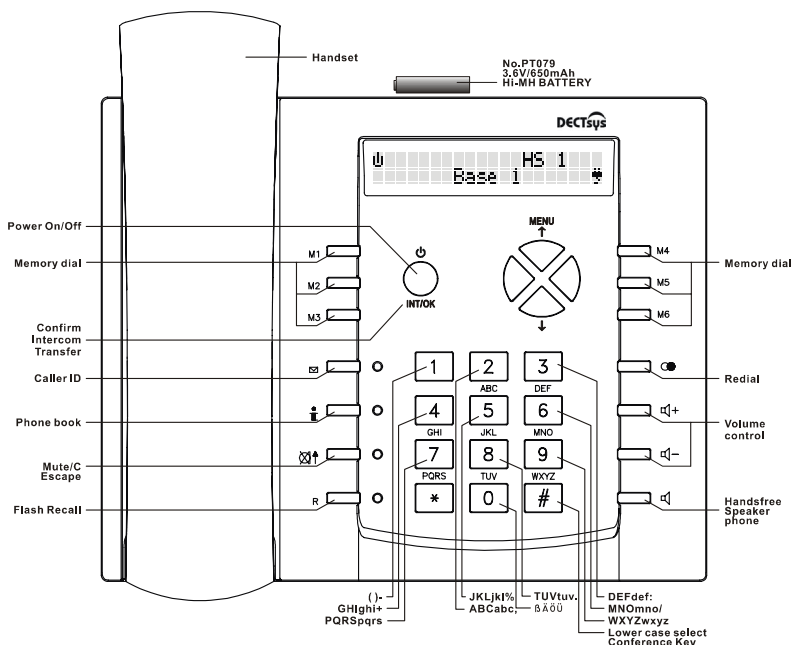
**R (Flash/Recall)** - FOR PABX TRANSFER.
- 

Speaker phone - Speaker phone on/off.
- 

Speaker volume control - Increase or decrease speaker volume Redial/Pause.
- 

Redial key - Browse the last three dialed telephone numbers or use to insert a pause in phone book telephone number entry.
- M1~ M6**
- 


Speed dial key.  
Up/Down key - Activate the programming menu by pressing **UP/DOWN** keys.





### 3.3. Using the menu



All applications on the handset are accessed via the MENU.


- To enter the Menu, press the Menu key  $\uparrow\downarrow$  (**UP/DOWN** keys) and confirm the selection with the **INT/OK** key .

The INT/OK key  is used almost every time to confirm a setting or to enter a sub menu.



- You can scroll through the menu by using the **UP** and **DOWN** keys  $\uparrow\downarrow$ .
- To return to the previous menu or to cancel an operation, press the **Erase** key .
- To return to Standby mode at any time, press and hold the **Erase** key  for 2 seconds.

### 3.4 Handset Display Language

Information on the handset can be displayed in three different languages. These are English, German and Italian.

- Press the **UP/DOWN** keys  $\uparrow\downarrow$  when the unit is in standby mode.
- Select **HS SETTING** by using the **UP/DOWN** keys  $\uparrow\downarrow$ .
- Press **INT/OK**  to confirm.
- Select **LANGUAGE** by using the **UP/DOWN** keys  $\uparrow\downarrow$ .



- Press **INT/OK** key  to confirm.
- Select the desired language by using the **UP/DOWN** keys  $\uparrow\downarrow$ .
- Press **INT/OK** key  to confirm.







### 3.5. Register this unit to a DECT GAP base station



Every new unit must be registered to a DECT GAP Base Station before you can start making phone calls.

To activate the DECT GAP Base Station's Registration Mode, please refer to the User Guide for that Base Station for the Registration Mode procedures.

- Press the **UP/Down** keys  $\uparrow\downarrow$  when the unit is in standby mode.
- Select **REGISTER** by using the **UP/DOWN** keys  $\uparrow\downarrow$ .
- Press **INT/OK** key  to confirm.
- Select the number of the Base Station [**BASE No.**] by using the **UP/DOWN** keys  $\uparrow\downarrow$ .
- Press **INT/OK** key  to confirm. It will display "Searching...".
- Wait for 15 seconds until an 11 digit RFPI No. XXXXX-XXXXXX appears.
- Press **INT/OK** key  to confirm.
- Enter the Base Station PIN Code. Please refer to the appropriate Base Station user guide for the Pin Code.
- Press **INT/OK** key  to confirm.


Once the unit has been successfully registered to the Base Station, it will remain in standby mode.

## 4. USING THE DeskDECT

### 4.1. Switching the Handset On/Off



- To turn the unit off, press and hold the **INT/OK** key  for 2 seconds while in standby mode.

No calls can be received when the unit is switched off.



- To turn the unit on, press and hold the **INT/OK** key  again for 2 seconds.

### 4.2. Making an external call

#### 4.2.1. Direct call

- Pick up the handset or press the **Speaker Phone** key . You will hear the external dial tone.
- Enter the telephone number and wait for connection.
- To erase mis-keyed digits, press the **Erase** key .

#### 4.2.2. Pre- dialing

- Enter the telephone number. To erase mis-keyed digits, press the Erase key .
- Lift the handset or press the Speaker Phone key .



The phone number will be dialed automatically.

A maximum of 25 digits can be entered at any one time.

### 4.3. Making an internal call



If you have more than one handset subscribed to the base station, you can make an internal call between the handsets.

- Press **INT/OK** key .
- Dial a handset No. The called handset will ring.
- When the called party answers, talk via the speaker phone hands-free  or lift the handset.


## 4.4. Answering an incoming phone call

When there is an incoming call, the telephone number and line of the call are displayed (L1 Ring or L2 Ring) when sent by the network.

When the incoming call is an internal call, the display shows the calling handset number only.

When it is an external call and the number is not transferred (private call), 'EXTERNAL' is displayed.



### 4.4.1. Answering a call

- To answer an incoming call, pick up the receiver or press the speakerphone key  .

### 4.4.2. Transferring a call to another handset



You can transfer an internal or external call to another handset.

- Pick up the receiver or press the speakerphone key  to answer the call.
- Press the **INT/OK** key  and then a handset Number.
- Hang up the handset to disconnect the call and transfer the call to the chosen handset.

The call has now been transferred.

 
## 4.5. Changing the speaker volume



When using the Handset





When using the speakerphone

The speaker volume can be changed using the volume control keys during conversation. 

The volume can be changed over 9 levels.

## 4.6. Deactivating the microphone (Mute)



It is possible to switch the microphone off during a conversation:

- Press the **C** key  to mute the microphone. (Red LED lights up on the handset).
- Press the **C** key  again to re-activate the microphone. (Red LED goes off on the handset).

## 4.7. Last number redial

The DeskDECT saves the last three dialed telephone numbers in the redial memory.

 


You can access the Redial list by pushing the **REDIAL** key  in the stand-by mode.

- Scroll through the Redial memory by pressing the **REDIAL** key .
- When the desired number appears on the display, lift the receiver.
- The number will be dialed automatically.
- Press and hold the **C** key  for 2 seconds to leave the redial list, if you do not want to make a call from the list.

## 4.8. Calling from the Caller List

 
The DeskDECT saves the telephone numbers of the last 50 different calls in the caller list.

This is only done when the telephone number of the incoming call has been sent via the analogue network.

- Press the MENU **UP/DOWN** keys  when the unit is in standby mode.
- Select **CALLER ID** by using the **UP** and **DOWN** keys  and press **INT/OK** key .



The screenshot shows a monochrome LCD display. The top line reads '>Caller ID' and the bottom line reads 'Memory dial'. A small cursor arrow points to the first digit of the number '1234567890' on the bottom line. The display is divided into segments, some of which are highlighted.





- Scroll through the Caller List by using the **UP** and **DOWN** keys .
- When the desired number appears on the display, lift the handset.

The number will be dialed automatically.

## 4.9. Memory dial M1~ M6



There are six memory dials (speed dials) available.

- Press the **UP/DOWN** keys  $\uparrow\downarrow$  when the unit is in standby mode.
- Select **MEMORY DIAL** by using the **UP/DOWN** keys  $\uparrow\downarrow$ .
- Press **INT/OK** key  to confirm.
- Select the **MEMORY DIAL BIN No.** by using the  $\uparrow\downarrow$  **UP/DOWN** keys.
- Press **INT/OK** key  to confirm.
- Enter required telephone number and press **INT/OK** key  to confirm.
- During adding, press and hold the **C**  key for 2 seconds to abort the process.

Repeat the steps above to programme the rest of the memory dial numbers.

## 4.10. Call Duration Display



When the Internal/External call is finished, the call duration will be visible for 3 seconds.

The time is displayed in the following format: {hh : mm : ss}(hours : minutes : seconds)

## 4.11. Out of Range


When the unit is out of the working range from the base unit or when it is not subscribed to the base unit, it will display "Searching...".

## 5. Call Transfer, On Hold, Toggle and Three Party Conference

### 5.1. Placing a Call on Hold (CH)


- To put a call on hold during conversation, press **INT/OK** key  .

Whenever the on-hold function is activated, the on-held party will hear music being played.

- To retrieve the call on hold, press the **INT/OK** key  again.
- If you replace the handset while the caller is hold, that external call will call back.

### 5.2. Transferring an External Call to another Handset





- Make a call, or after receiving an incoming call, press the **INT/OK** key  .
- Enter the internal handset Number to transfer the call to, then hang up the handset to transfer the external call.

You will be disconnected but both other callers can talk together.

### 5.3. Brokers Call (Toggling between an internal call and an external call)

If you place an **external** call on hold, you can make a call **to another internal handset**. You can then toggle between the first and second call.


- Put the external call on hold by pressing the **INT/OK** key  .
- Call an internal handset number and when the call is connected, press the **INT/OK** key  to toggle / switch between both calls. While one call is placed on hold you can talk to the other caller.

#### Please Note


**If you replace the receiver and hang up on the call, both calls will be disconnected.**

## 5.4. Three party conference call (Conf)

You can set up a three-way conference call with another internal caller and an external caller.

- Put the external call on hold by pressing the **INT/OK** key  .
- Enter the desired internal handset number and when the call is connected, press and hold the “#” button for 2 seconds to establish the three-way conference call. Both handsets will start counting the talking time.

### **Please Note**

If during a conference call you want to talk to the internal caller only, press the **INT/OK** key  . The external call will be placed on hold. You can toggle / switch between the two callers or restart the conference at any time.

## 6. PHONEBOOK



### 6.1. Use of the alphanumerical keypad


The telephone book holds up to a maximum of 50 names and telephone numbers.

Use the alphanumerical keypad to enter text.

To select a letter, press the corresponding button. For example: if you press numerical button '5', the first character (J) will be shown on the display. Press this key multiple times if you want to select another character under this button.

For example: Press button '2' twice to select the letter 'B'.

If you want to select 'A' as well as 'B', press button '2' once, wait for 2 seconds until the cursor has moved to the next location and then press button '2' again.

Any characters entered incorrectly can be erased by pressing the **C** key .

To change characters to lower case, press the **#** key.


The following characters are available by pressing the corresponding keys, as detailed below:

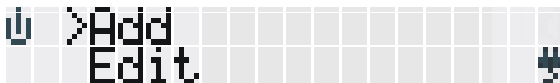
#### *Alphabet allocation chart*



Key pressed	Once	Twice	3 times	4 times	5 times
1	1		(	)	-
2	A	B	C	2	,
3	D	E	F	3	:
4	G	H	I	4	+
5	J	K	L	5	%
6	M	N	O	6	/
7	P	Q	R	S	7
8	T	U	V	8	.
9	W	X	Y	Z	9
0	0				
*	*				
#	#				



## 6.2. Adding an entry to the Phonebook


- Access the MENU by pressing the **UP/DOWN** keys  $\uparrow\downarrow$  when the unit is in standby mode.
- Select **PHONE BOOK** by using the **UP/DOWN** keys  $\uparrow\downarrow$ .
- Press **INT/OK** key  to confirm.
- Select **ADD** by using the **UP/DOWN** keys  $\uparrow\downarrow$ .

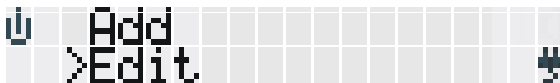









- Press **INT/OK** key  to confirm.
- Enter the required name and press **INT/OK** key to confirm.
- Enter the required number and press **INT/OK** key to confirm.
- To cancel the entry, press and hold the **C** key  for 2 seconds to abort the process.

Once entered into the Phonebook, all entries are stored in an alphabetical order.


## 6.3. Changing a Name and Number in the Phonebook

- Access the MENU using the **UP/DOWN** keys  $\uparrow\downarrow$  when the unit is in standby mode.
- Select **PHONE BOOK** by using the  $\uparrow\downarrow$  **UP/DOWN** keys.
- Press **INT/OK** key  to confirm.
- Select **EDIT** by using the **UP/DOWN** keys  $\uparrow\downarrow$ .





- Press **INT/OK** key  to confirm.
- Select the name and number to be changed by using the **UP/DOWN** keys  $\uparrow\downarrow$ .
- Press **INT/OK** key  to confirm.
- Use the **C** key  to erase an old entry. Enter the new name and press **INT/OK** key  to confirm.
- Use the **C** key  to erase an old entry. Enter the new number and press **INT/OK** key  to confirm.
- To cancel the entry while adding it in, press the **C** key  for 2 seconds to abort the process.


## 6.4. Reading the Phonebook List

- Press the **UP/DOWN** keys  $\uparrow\downarrow$  when the unit is in standby mode.
- Select **PHONE BOOK** by using the **UP/DOWN** keys  $\uparrow\downarrow$ .
- Press the **INT/OK** key  to confirm.
- Select **READ** by using the **UP/DOWN** keys  $\uparrow\downarrow$ .





- Press **INT/OK** key  to confirm.
- Read the phonebook list by using the **UP/DOWN** keys  $\uparrow\downarrow$ .
- Press the **C** key  to return to standby mode.

## 6.5. Quick Search in the Phonebook List






- Press the **UP/DOWN** keys  $\uparrow\downarrow$  when the unit is in standby mode.
- Select **PHONE BOOK** by using the **UP/DOWN** keys  $\uparrow\downarrow$ .
- Press the **INT/OK** key  to confirm.
- Select **READ** by using the **UP/DOWN** keys  $\uparrow\downarrow$ .




- Select a letter from the alpha-numeric keypad for quick search facility
- Press **INT/OK** key  to confirm.
- Press the **C** key  to return to standby mode.

## 6.6. Erasing one Number and Name from the Phonebook






- Press **UP/DOWN** keys  $\uparrow\downarrow$  when the unit is in standby mode.
- Select **PHONE BOOK** by using the **UP /DOWN** keys  $\uparrow\downarrow$ .
- Press **INT/OK** key  to confirm.
- Select **DELETE** by using the **UP/DOWN** keys  $\uparrow\downarrow$ .
- Press **INT/OK** key  to confirm.
- Select the phonebook entry to be deleted by using **UP/DOWN** keys  $\uparrow\downarrow$ .
- Press **INT/OK** key  to confirm.
- Press **INT/OK** key  to confirm again.
- During the deleting, press and hold the **C** key  for **2 seconds** to abort the process.

## 6.7. Erasing all Numbers and Names from the Phonebook

- Press the **UP/DOWN** keys  $\uparrow\downarrow$  when the unit is in standby mode.
- Select **PHONE BOOK** by using the **UP/DOWN** keys  $\uparrow\downarrow$ .
- Press **INT/OK** key  to confirm.
- Select **ERASE ALL** by using the **UP/DOWN** keys  $\uparrow\downarrow$ .



- Press **INT/OK** key  to confirm.
- Press **INT/OK** key  to confirm again.
- During the deleting, press and hold the **C** key  for **2 seconds** to abort the process.



## 7. HANDSET SETTINGS




### 7.1. Key lock

- Press **UP/DOWN** keys ↑↓ when the unit is in standby mode.
- Select **KEY LOCK** by using the **UP/DOWN** keys ↑↓.






- Press **INT/OK** key  to confirm.
- The display shows "**LOCKED**". The keypad is now locked.
- To release the key lock, press the **DOWN** key ↓, then the **INT/OK** key .

### 7.2. Ring Melody and Volume for External Calls


- Press **UP/DOWN** keys ↑↓ when the unit is in standby mode.
- Select **HS SETTING** by using the **UP/DOWN** keys ↑↓.
- Press **INT/OK** key  to confirm.
- Select **SET EXTRING** by using the **UP/DOWN** keys ↑↓.






- Press **INT/OK** key  to confirm.
- Select the desired ringer melody by using the **UP/DOWN** ↑↓ keys.
- Press **INT/OK** key  to confirm.
- Select the desired ringer volume by using the **UP/DOWN** ↑↓ keys.
- Press **INT/OK** key  to confirm.

### 7.3. Ring Melody and Volume for Internal Calls

- Press **UP/DOWN** keys ↑↓ when the unit is in standby mode.


- Select **HS SETTING** by using the **UP/DOWN** keys ↑↓.
- Press **INT/OK** key  to confirm.
- Select **SET INTRING** by using the **UP/DOWN** keys ↑↓.





- Press **INT/OK** key  to confirm.
- Select the desired ringer melody by using the **UP/ DOWN** keys ↑↓.
- Press **INT/OK** key  to confirm.
- Select the desired ringer volume by using the **UP/DOWN** keys ↑↓.
- Press **INT/OK** key  to confirm.

#### 7.4. Enable/disable the Baby Call Function

The **Baby Call Function** is a programmed number, which will be dialed automatically when pushing any key. All other functions of the keypad will be disabled until the setting has been cancelled.

- Press **UP/DOWN** keys ↑↓ when the unit is in standby mode.
- Select **HS SETTING** by using the **UP/ DOWN** keys ↑↓ .
- Press **INT/OK** key  to confirm.
- Select **BABY CALL** by using the **UP/DOWN** keys ↑↓.






- Press **INT/OK** key  to confirm.
- Enter the hot call telephone number by using numeric keypad.
- Press **INT/OK** key  to confirm. The display will show **BABY CALL**.
- To disable the Hot Call function, press the **DOWN** key ↓ twice quickly to disable hot call.

#### Please Note

The Baby Call function cannot be used in hands free mode.

## 7.5. Enable/Disable Key Tone






- Press **UP/DOWN** keys ↑↓ when the unit is in standby mode.
- Select **HS SETTING** by using the **UP/DOWN** keys ↑↓.
- Press **INT/OK** key  to confirm.
- Select **SET KEYTONE** by using the **UP/DOWN** keys ↑↓.
- Press **INT/OK** key  to confirm.
- Select **ON/OFF** by using the **UP/DOWN** keys ↑↓.
- Press **INT/OK** key  to confirm.

## 7.6. Handset Name




The name of the handset will be displayed while the phone is in standby mode. To change or enter this name:

- Press **UP/DOWN** keys ↑↓ when the unit is in standby mode.
- Select **HS SETTING** by using the **UP** and **DOWN** keys ↑↓.
- Press **INT/OK** key  to confirm.
- Select **USER NAME** by using the **UP /DOWN** keys ↑↓.
- Press **INT/OK** key  to confirm.
- Enter or change the handset name by using the alphanumerical keypad.
- Press **INT/OK** key  to confirm.





## 7.7. Set PIN Code

To change the default handset PIN code:


- Press **UP/DOWN** keys ↑↓ when the unit is in standby mode.
- Select **HS SETTING** by using the ↑↓ **UP/DOWN** keys.
- Press **INT/OK** key  to confirm.

- Select **SET PINCODE** by using the  $\uparrow\downarrow$  **UP/DOWN** keys.




 >Set Pincode  
 Baby call

- Press **INT/OK** key  to confirm.
- Enter the Handset Pin Code, **HS PIN:** (DEFAULT PIN = 1590)
- Press **INT/OK** key  to confirm.
- Enter the new Pin code: **NEW PIN:**
- Press **INT/OK** key  to confirm.
- Re-enter the new Pin code: **RETYPE:**
- Press **INT/OK** key  to confirm.

## 7.8. Answer a Call using Any Key


- Press **UP/DOWN** keys  $\uparrow\downarrow$  when the unit is in standby mode.
- Select **HS SETTING** by using the **UP/DOWN** keys  $\uparrow\downarrow$ .
- Press **INT/OK** key  to confirm.
- Select **ANYKEY TALK** by using the **UP/DOWN** keys  $\uparrow\downarrow$ .





 Auto Pickup  
 >Any key talk

- Press **INT/OK** key  to confirm.
- Select **ON/OFF** by using the **UP/DOWN** keys  $\uparrow\downarrow$ .
- Press **INT/OK** key  to confirm.

## 7.9. Erase Caller List


 Language  
 >Erase CID

- Press **UP/DOWN** keys  $\uparrow\downarrow$  when the unit is in standby mode.
- Select **HS SETTING** by using the **UP** and **DOWN** keys  $\uparrow\downarrow$ .
- Press **INT/OK** key  to confirm.

- Select **ERASE CID** by using the **UP** and **DOWN** keys  $\uparrow\downarrow$ .
- Press **INT/OK** key  to confirm.
- Prompt **SURE?**
- Press **INT/OK** key  to confirm or **C** key  to escape.

## 7.10. Handset Reset



The DeskDECT original default settings are:

Display language: English

Pin Code: 1590

Phone Book: None

Redial List: Empty





Call List: Empty

Hot Call: Off

Key Click: On

Speed Dial: Empty

To reset the handset to its standard settings:

- Press **UP/DOWN** keys  $\uparrow\downarrow$  when the unit is in standby mode.
- Select **HS SETTING** by using the **UP/DOWN** keys  $\uparrow\downarrow$ .
- Press **INT/OK** key  to confirm.
- Select **SET DEFAULT** by using the **UP/DOWN** keys  $\uparrow\downarrow$ .
- Press **INT/OK** key  to confirm.
- The display shows **ARE YOU AURE?**
- Press **INT/OK** key  again to confirm or press the **C** key  to abort the process.



## 8. TECHNICAL SPECIFICATIONS

- Standard: DECT (**D**igital **E**nhanced **C**ordless **T**elecommunications)  
GAP (**G**eneric **A**ccess **P**rofile)
- Frequency range: 1880 ~ 1900 MHz (BW=20MHz)
- RF channels: 10 channels
- Channel Bandwidth: 1.728
- Modulation: GFSK
- Transmission Output Power: 10mW
- Data Transmission Rate: 1.152 Mbps
- Speech coding: ADPCM 32 K bps
- Communication Range (max.): Outdoor 300 Meters - Indoor 50 Meters
- Power Supply:  
INPUT AC110 / 230 VAC 60Hz / 50Hz  
OUTPUT DC 9V 500mA  
Battery PT079 Ni-MH 3.6V 650mA
- Handset Rechargeable Ni-MH Battery: PT079 3.6V 650mA
- Operating Time: Standby 100 Hours - Talk: 10 Hours
- Operating Temperature: 0°C to 40°C
- Storage Temperature: 0°C to 40°C
- Dimensions: 200 x 160 x 60 mm
- Weight: 600g (Approx)