(PM 0208 Issue.10 - 11/2001)

### Description

Your Solitaire 6000 payphone is designed for use in supervised indoor locations and accepts 10p, 20p, 50p and £1 coins. The case design allows the Solitaire 6000 to be equally 'at home' free-standing or fixed on a wall or shelf and a Liquid Crystal Display makes it easy to operate.

The Solitaire 6000 provides Payphone Identification Tone (Beep...Bop) to tell telephone operators that the telephone they have dialled is a payphone and reverse charge calls should not be connected.


#### Calls to Emergency Services on 999 or 112 are always available without coins.

In Basic Settings, calls to 100 Operator and 142/ 192 Directory Enquiry services are only available to the payphone owner, in owner mode. These facilities can be opened to payphone users. Your payphone also has the facility to bar calls to particular STD codes, for example 090 is barred in the Basic Settings

As you become more familiar with the extensive facilities it offers, you can of course customise the settings of your Solitaire 6000 to suit your own particular needs.

#### Hearing Impaired Users

The Solitaire 6000 incorporates an inductive coupler in the handset to assist users of post aural hearing aids.

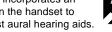

**Future Coins** In the event that the Royal Mint introduces new coins, please contact our Helpline.

## Please Read This

You do not have to read all of this leaflet to use your payphone. Your Solitaire 6000 is ready to use 'straight from the box'. Batteries are already fitted and basic setting up has been done.

#### Recording the Key Number and **Serial Number**

We have supplied your Solitaire 6000 with two keys to fit the case lock. As well as giving access to the cash inside the phone they also allow you to enter the programming modes. You need to record the key number:

If you lose the keys, and you know the key number, you can get replacements by contacting our Customer Services Helpline.

You will find the serial number of your phone on its base. Record this serial number as it may be required if you request Warranty service:

Your Solitaire 6000 is designed to plug into a new modular telephone socket. If you do not have such a telephone connection point, you should contact your local BT Payphone Sales Office to arrange for one to be fitted. They can be contacted on:

0800 115511 - UK (except Northern Ireland) - Northern Ireland

In the event of difficulties, please call our Customer Services Helpline on 0870 601 0024

#### Installation

If you require to fix your Solitaire 6000 securely to a wall or table, open the case, remove the cashtray, locate the fixing positions, drill and fix as appropriate using the fixing kit supplied. Close and lock the case.

When providing a payphone service to the public, in order to comply with OFTEL regulations, you must complete and display the important information panel near the payphone.

#### 1. Remove your Personal Identity Number (PIN) label from the handset and record the number here:

2. Plug it in. 12:27



Your Solitaire 6000 is now ready to use!

#### Making a Payphone Call

The Payphone Identification Tone (Beep...Bop) will sound in the earpiece. Calls to Emergency Services are free, no coins are required.

Lift handset DIAL Dial number 01234567890 When answered: Insert cash 20P Next You may now speak *55* 

Display shows time left. At 10 seconds, expiry tone prompts to insert cash. Call is disconnected if time reaches 0, and **DIAL** prompt reappears.

## Payphone Mode - NEXT CALL

If sufficient cash credit remains after your first call, you may make further calls without inserting more cash. DON'T HANG UP!

30P
Next Call ? <b>26</b>

You may now speak on your Next Call - Insert more coins if required. You may use this sequence more than once.

## Making an Owner Call

As the payphone owner who knows the PIN, you do not need cash to make a call. Begin with the handset in place:

Press \* until time disappears, then - - - -Press #: Next Enter your fourdigit PIN ОWnEr if correct, display shows: Next Lift handset 13:05 OWnEr Dial number and Call 1 Make your call. 01234567890

### Owner Mode - NEXT CALL

You may make another owner call without reentering your PIN. If you wish to dial another number: DON'T HANG UP!

Next **Press NEXT CALL** 13:08 OWnEr Call ' Dial new number and Make new call | **09876543210** 

You may use this sequence more than once. However if you replace the handset you will have to re-enter your PIN.

Press one of the 3 memory buttons

## Calling a Memory Number

Memory numbers can be programmed to taxi, credit card authority, head office numbers etc. They must be programmed before use - see (5).

Lift handset. Press chosen DIAL memory button Display shows selected memory number. 01122334455

If memory number chosen is set to a FREE number, the call can proceed without coins However if the number is set as a PAY call you will be prompted to insert cash as if the number had been dialled normally

NB: Memory numbers may be set at rates different from normal (e.g. a national number may be set at a local rate).

Memory numbers may be used in the owner mode, when no cash will be required.

#### Receiving a Call

Assuming the Ringer Volume switch is set to

either A or N, your payphone will ring normally when an incoming call is received.


Calls may be accepted by lifting the handset.

The Payphone Identification Tone will sound in the earpiece to tell telephone operators that the telephone they have dialled is a payphone and that reverse charge calls should not be connected. Do not press any dialling buttons after lifting the handset, as this may result in the incoming caller being unable to hear you.

NB: Calls accepted on an extension telephone cannot be subsequently transferred to the payphone.

## Changing the Ringer Volume

Unlock and open the case, then locate and adjust the Ringer Volume Switch (high/low/off). Then close and lock the case

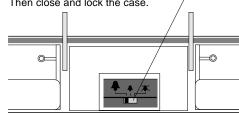


#### **Emptying the Cashtray**

Unlock the case

With the key in the unlocked position, the display shows the cash records



last unlocked installation

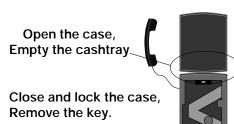

NB: The record of cash since the case was last unlocked is reset to zero, but the record of the total cash since installation is unaffected by this sequence.

## Changing the Batteries

NB: The PIN, Time and Day and any other settings you have made may be lost if you do not perform this swiftly. Read the information below before you change the batteries.

When the batteries are becoming exhausted, a **BAtt LoW** warning will be displayed.

Use only new alkaline cells (4xAA cells, LR6 or MN1500), and not rechargeables. NB: Emergency calls can still be made when

the batteries are exhausted. To change the batteries do not unplug

your Solitaire 6000, simply lift the handset Unlock and open the case, Press the battery release button, Remove the battery box.

Remove the old batteries. Insert the new batteries

(Correct polarity is essential!)

Replace the Battery Box, close and lock the case & replace the handset.

The display shows the correct time and normal function is restored: If display shows -refer to Page (5).



## Plug-In-Customiser (PIC)

If you require an expansion of your payphone's facilities, contact our Helpline for details

### Basic Settings

Solitaire 6000 is factory programmed with the following Basic Settings. Many may be changed refer to the appropriate section.

Time/Day: Both set to current. (Check B.S.T 1 Hr) Memory Buttons: None have been preset. Local Codes: 0345, 0645, 0845 and 01399 are set. National & International Unit Fees: Minimum Deposit set to 20p, and Unit Fee set to 10.0p. Unit Times (in seconds)

lCargeband	Cheap	Daytime	Weekend
Local	55	55	55
Long Distance	55	55	55
Mobile	12	8	12
PCN	16	9	16

Time Period Defaults: Mon to Fri: Cheap 00.00-08.00 & 18.00-24.00. Mon to Fri: Daytime 08 00-18 00 Sat and Sun: Weekend Rate all day Dialling Type: Set to Tone.
Personal Identification Number: On handset label Exchange/PABX Access: Set to Direct Exchange Line

Mercury Access: Set to Of Ringtime Limit Default: Set to 45 seconds. International Barring: International calls are allowed **Exception Dialling Code Defaults:** 

Free	Local	Long Distance	Mobile	PCN	Barred
0500, 0800, 0808, 00800	0345, 0645, 0845, 01399	01, 02, 05, 0870, 0990	03, 04, 0585, 0589, 07, 08	09	1, 033, 06, 076, 0820, 08364, 0839, 089, 090, 0930, 0991, 0087

Service Numbers: 100/142/192 Operator/Directory Enquiry calls are barred in Payphone Mode. Free unlimited digits:144, 0800, 0808, 0500, 00800 These are factory settings. They may be superseded by a "PIC" upgrade, in which case new settings will be supplied with that upgrade.

## **Basic Programming Mode**

To adjust your Solitaire 6000 settings, you must enter Programming Mode. Leave the handset in place and begin with the key locked:

Press \* until time disappears, then Press # Unlock the case (no need to open it) Turn the key fully **Enter your PIN** Set time (on keypad) 18:53 When correct: Press #

or, for B.S.T Clock changes: Press \* to advance clock 1 hour, Press \* again to retard clock 2 hours, Press \* again to advance clock by 1 hour. When correct time is shown: Press #.

Set day (on keypad) (1=Mon... 7=Sun, and 0 sets the payphone to perpetual daytime rate),

then Press #

#### **Programming the 3 Memory Buttons**

Your Solitaire 6000 payphone now allows you to program 3 numbers on **prog MEM** the memory buttons underneath the keypad; for example, a local taxi

company, a credit card authority or a head office You may record the details on the label under the clear plastic cover by using a ballpoint pen in

Note local calls starting 01 & 02 the hole at either end of the cover and flexing it.

Press #

LOC -----

#### 1 or 2 or 3 memory you selected. Enter the first code Enter the telephone number (e.g. 01672) (e.g. 0870 601 0024) then Press #

Choose the chargeband required (e.g. Local) by pressing \* to move the display through the different chargebands available (including Free and Barred).

If the memory is empty,

the display shows one

digit for the empty

When correct Press #. Repeat for the other two memory buttons as required. Complete the label and refit the cover.

be charged at Local rates.

Locate "Local Call Lists" in

vour phonebook.

For your area:

**Local Exception Codes setting** 

Because your payphone doesn't know where it is

installed, it will charge all calls commencing with

01 and 02 at the Long Distance rate. There are

some calls with these prefix digits which should

To localise your payphone:

LOC 010024

prog MEM

08706010024

and wait until display shows:

LOC -01672

Then press # Repeat for all local codes required, Then press #.

(If FULL displays, all the exception code capacity has been used.)

# Advanced Feature Programming

Enter the advanced

feature PIN (2468) prog to set other facilities, or

Press \*

to leave the Programming Mode.

Advanced Features may then be accessed by pressing the relevant keypad number:-

1 = Unit Fee (Not available if PIC fitted)

2 = Unit Times 3 = Dialling Type

4 = Change PIN

5 = PABX Access

6 = Mercury Access

7 = Ringtime Limit 8 = International Allow or Bar

9 = Dialling Code Review/Look

0 = Dialling Code Entry

Details of each setting are provided overleaf.

Nat. Minimum Fee

Nat. 1st Unit Fee

Int . Minimum Fee

Int. 1st Unit Fee

2 - Unit Times

payphone mode.

These are set by the fitted PIC:

Nat. Subsequent Unit Fee

Int. Subsequent Unit Fee

When these have been entered,

Press #, then

Press # to return to **proq** prompt.

NB: Changing these values will affect call charges. Such changes must be incorporated in the payphone wall notice in order to comply with OFTEL regulations

20p

10p

10p

20p

10p

10p

3 - Dialling Type **Enter Advanced Programming Mode** Press 3 on the keypad

Display shows current dialling mode:

Press \* to swap | PULSE/tOnE

between PULSE and TONE Press # to return to **prog** prompt.

**Enter Advanced Programming Mode** Press 2 on the keypad

You may press # at any time in the sequence to

step to the next section. Lifting the handset

during programming returns you to the

Display shows LOCAL CHEAP rate is set to 55 seconds:



Enter a new value Then Press #

Display moves to LOCAL DAYTIME rate which may be set in the same way.

Then Press #

Display moves to LOCAL WEEKEND rate which may be set in the same way.

Allows you to enter specific national dialling codes

(and their chargebands). For example, your

network provider may introduce a new dialling

code at Premium Rate and this feature enables

NB: All unallocated numbers in the range 03

Chargebands available are: Local, Long Distance,

**Enter Advanced Programming Mode** 

Press 0 on the keypad

(Loc, Long, Mob, PCN, Free or Bar

or **DEL** to delete a previously entered code.)

entry or deletion of the LOC - - - -

Pressing # allows the next number to be entered.

Press # to return to **proq** prompt.

Choose chargeband to be entered by pressing

to 08 are automatically set to the Mobile

0 - Dialling Code Entry

you to bar such a service.

Mobile, PCN, Free and Barred

then Press #

Display changes to allow

dialling code:

(If you wish to delete any

### 4 - Change PIN

**Enter Advanced Programming Mode** Press 4 on the keypad

You may enter a

new 4 digit PIN Be sure to record it

2345 PIn

Display shows current

the same telephone line.

of 4 is allowed on any one line.

**Extension Telephones** 

PIn 6789

Press # to return to proq prompt.

Ringer Equivalence Number

All items of telephone equipment have a Ringer

Equivalence Number (REN). The REN is used to

calculate how many items may be connected to

The Solitaire 6000 has a REN of 2. A total REN

To avoid unauthorised chargeable calls being

payphone line, any extension should be in a

NB: Calls accepted on an extension

transferred to the payphone.

made on an extension phone connected to your

telephone cannot be subsequently

## **Faults**

If no Time of Day is displayed whilst the Solitaire 6000 is idle, the unit has lost its programming.

The display would show:

5 - PABX Access

must be made correctly.

dirEct LInE

Then press #.

If you selected PABX.

then the display shows:

Enter the PABX

access digit

(usually 9)

then press #.

The display then shows:

BT Chargecard (144)

further adjustment.

If you require your Solitaire 6000 to work as an

extension to a PABX system, these adjustments

**Enter Advanced Programming Mode** 

Press 5 on the keypad

Use \* to swap between DIRECT LINE or PABX.

- the presending pause (e.g. 3 seconds: ask your

Enter a single digit for the pause,

then

Press # to return to **prog** prompt.

Your Solitaire 6000 is already set to allow access

If you wish to prevent access to the service see

to the BT Chargecard system and needs no

Page (10) on exception code deletion.

PABX maintainer if necessary for advice.)

- Pb ACCESS

3 Pb PAUSE

Or if, when the key is turned, display shows: the unit has lost its programming.

Continue with Page (5) of this guide.

If the display shows this: replace the batteries see Page (4).

BAtt Low

If, when the handset is lifted the display shows this, it may indicate:

Batteries need replacing

• Cashbox is full

999 or 112

· Coin jam in mechanism

If there is a coin jammed, you should try to clear it.

If there is no dial tone and the display shows: (i.e. time but no payphone symbol)



Check the payphone is correctly plugged in to the wall socket.

For ease of maintenance Solitaire 6000 is fitted with a quick release hinge. Open the case, push back the hinge and remove the payphone top from the base.

Your Solitaire 6000 has been approved to provide the following:

- A public payphone service.
- For exchanges supporting loop disconnect (LD) and multi frequency (MF) dialling.
- Inductive coupling to appropriate hearing aids.
- Call barring.

**Approval** 

- Compatible for use with call routing apparatus. call routing apparatus means PBXs. PABXs. key systems, dealerboards, key and lamp units, or automatic call distributors which provide a BS6312 compatible port and meet the
- requirements of BS6317 for simple telephones The Solitaire 6000 is only approved for use as an extension instrument to compatible PBXs. Your supplier should be consulted for an up to
- It cannot be guaranteed that the Solitaire 6000 will operate correctly under all possible conditions of connection to compatible PBXs. Any difficulties should be referred to your supplier.
- The Solitaire 6000 is not approved for use on PABX systems which return a secondary dialling tone if the delay setting is programmed to less than 3 seconds. Consult the supplier of your PABX if you are in any doubt.
- Solitaire 6000 is approved for use on a 1 + 1 carrier system
- Safety: Solitaire 6000 is only approved for operating at Telecommunication Network Voltage (TNV). Do not attempt to alter or add additional connections to the Solitaire 6000.

Any other usage will invalidate the approval of the apparatus if as a result it then ceases to conform to the standards against which approval was granted.

#### 7 - International Allow or Bar

Use this procedure if you wish to prevent International calls being made on your payphone.

**Enter Advanced Programming Mode** Press 8 on the keypad



Int AlloW

Use \* to swap between allowing and barring International Calls.

Press # to return to **proq** prompt.

#### 8 - Dialling Code Review/Look

Allows you to review the various dialling codes (and their chargebands) which are programmed into the Solitaire 6000, including your entries and Basic Settings. It is not possible to change categories in this mode. Chargebands are: Local, Long Distance, Mobile, PCN, Free and Barred.

### **Enter Advanced Programming Mode** Press 9 on the keypad

Choose chargeband for review by pressing \* repeatedly (Loc, Long, Mob, PCN, Free or Bar)

#### then Press #

The display shows the codes, in entry order. together with assigned chargeband.

LOC Look

Pressing # advances to next number. You may repeat this for each chargeband. You may exit from this routine at any time by pressing \*.

Press # to return to proa prompt.

The figures below are for a Solitaire 6000 with its Basic Settings. If you make

changes you MUST amend the User

Notice

Solitaire 6000

100 Operator Calls Barred / Available

Unused Coins Not Returned

20p Minimum Payment

Pay On Answer 10p, 20p, 50p, £1

Address

Owner/Maintainer

Local Calls 11p/minute

National Calls 11p/minute

International Calls 300p/minute

999/112 Calls Free

We have included a copy of a suitable

You will need to complete some of the

notice with your Solitaire 6000.

details yourself.

## **OFTEL Regulations**

6 - Ringtime Limit

Enter time (in seconds)

before disconnection.

allowed for phone to ring

Because your Solitaire 6000 does not receive a

Limit is set. This controls how long the payphone

**Enter Advanced Programming Mode** 

Press 7 on the keypad

Press # to return to **proq** prompt.

signal from the exchange to tell it when an

outgoing call has been answered, a Ringtime

will allow the call to ring if no cash is inserted.

value only if you experience difficulties.

45 seconds is recommended. Only change this

If you are providing a payphone service to members of the public, regulations introduced by OFTEL in 1988 make it a legal requirement for you, the payphone owner, to display a notice alongside your payphone.

CUtOFF 45

The notice must carry the following information:

- · Details of any limitations of access to the operator
- · Information on whether unused coins are returned to the
- The minimum payment required to make a call.
- The method of payment, that is, types of coin the payphone will accept • The full postal address of the payphone, to help with
- The identity of the person to be contacted in case of complaints
- The basis of charging for calls from the payphone. • A clear indication that 999 and 112 calls are free.
- · When an extension is connected to the payphone, a warning that this may affect the privacy of payphone

calls

Solitaire 6000 meets the European Directives 1999/5/EC for Radio & Telecommunication Terminal Equipment

Solitaire 6000 is manufactured in China under licence for Solitaire Payphones Ltd.

exception code you must select **DEL** then press #. Enter the code to be DEL - - - - deleted and then press #, and repeat as required.)

Self Test

secure location.

If you suspect a problem:

Insert and turn the key, then Press \*.

The display should show

If the display shows FAIL proceed to the Faults

section which follows.

PAYPHONE OK FAIL