











Language: English
Final size: 92.5mm x 92.5 mm closed; 185mm x 185mm open
Format: 4 panel fanfold
Stock:
Ink:
Fonts supplied:
Film:
Author & coordinator:

Panel 2

Idle mode	
Switch the handset off or on	Long press 
Initiate a call	Enter number, 
Answer a call	 (loudspeaker off)
	 (loudspeaker on)
Reject a call	
Calls lists	
Main menu	
Contacts (default shortcut)	
Central directory (default shortcut)	
Messaging (default shortcut)	

DECT 4027 and 4070 Handset information

For more information about the features of these handsets, see *DECT Handsets 4027 and 4070 User Guide* (NN43120-122).

Safety information

Do not rely on a cordless handset in emergencies.


Never use your handset in:

- ✗ the vicinity of electrical detonators
- ✗ shielded rooms
- ✗ areas where radio transmission is forbidden
- ✗ aircraft

Do not place your handset near:

- ✗ water, moisture, or damp areas
- ✗ heat sources, direct sunlight, or unventilated areas
- ✗ devices that generate strong magnetic fields
- ✗ areas with excessive dust, shock, or temperature

Copyright © 2008 - 2009 Avaya Networks
All Rights Reserved.
NN43120-121
DECT 4027 and 4070 Handsets









 





01.04

Panel 4

Fold


Panel 3

Profile menu (default shortcut)	
Emergency call (if configured)	Long press 
Speed dial (if configured)	Long press 1 to 9
Turn on or off the Silent profile	Long press 
Lock or unlock the dialpad	 
Call mode	
Release the call	
Transfer the call	 Dial number 
Increase the volume	
Decrease the volume	
Turn on or off the loudspeaker	
Mute or unmute	

Fold

DECT 4027 and 4070 Handsets

Quick Reference Card

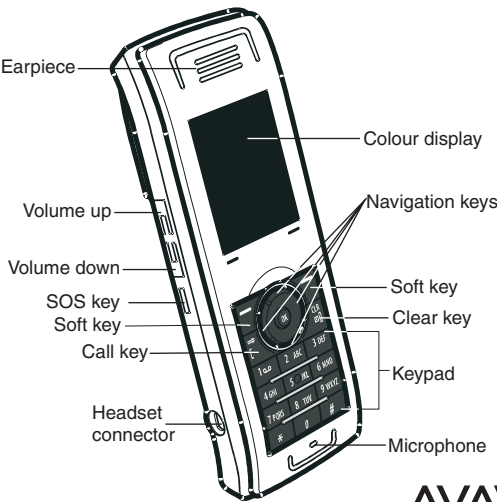

AVAYA

Panel 1

Fold